


MOTOR PARTS-RYOBI 120r




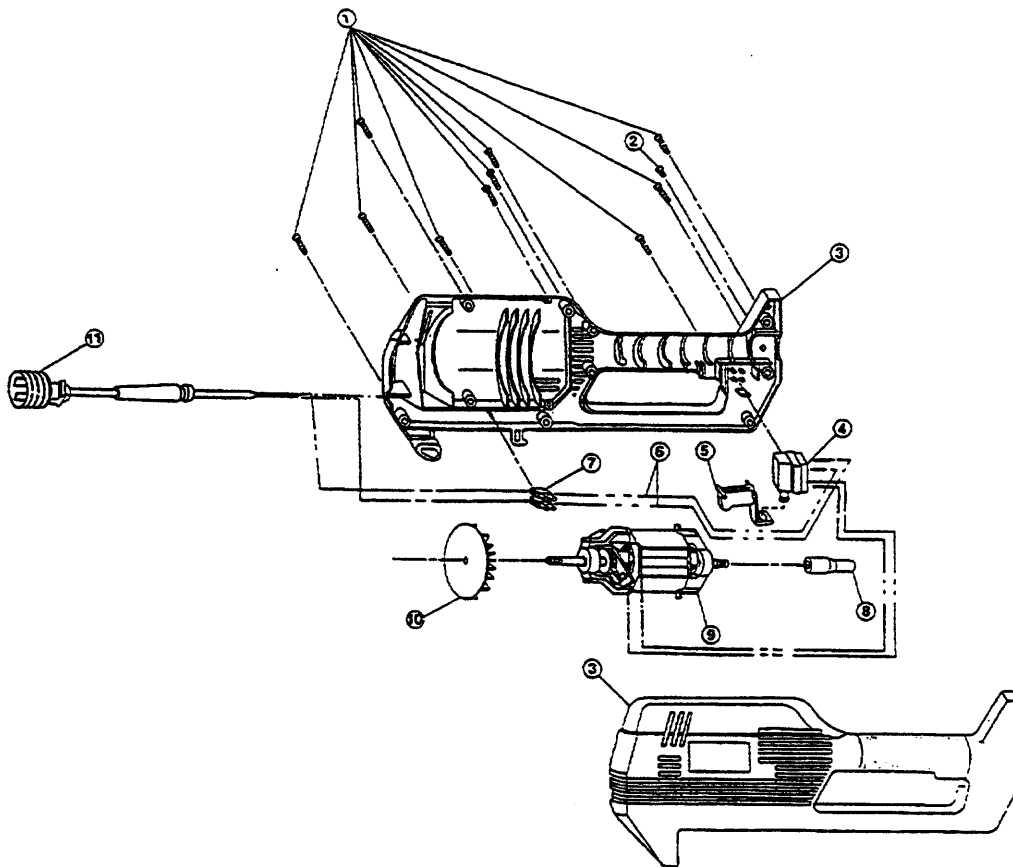


Item	Part No.	Description
1	180300	Screw Set
2	145569	Anti-Rotation Screw
3	180558	Motor Housing Assembly
4	180150	Switch
5	180151	Trigger
6	180559	Lead Wire
7	180305	Terminal Block

Item	Part No.	Description
8	180152	Driver
9	180154	Motor
10	180155	Fan
11	180156	Power Cord

The above part numbers are for serial numbers 912908901 thru 002194300.

BOOM AND TRIMMER PARTS-RYOBI 120r

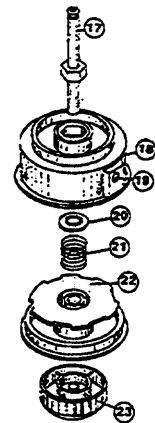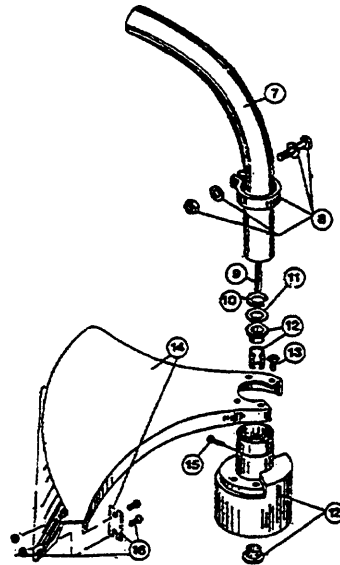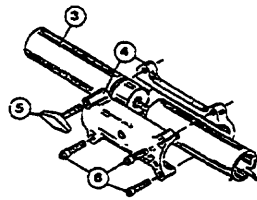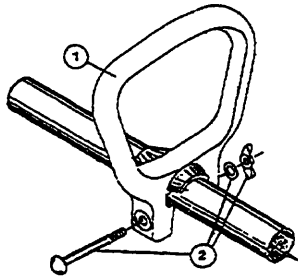

Item	Part No.	Description
1	145819	D-Handle
2	153523	D-Handle Hardware Assembly
3	180566	Upper Drive Shaft Housing Assembly
4	153671	Split-Boom Coupling Set
5	611716	Adjustment Knob
6	683074	Coupling Bolt Assembly
7	180567	Lower Drive Shaft Housing Assembly
8	153597	Lower Clamp Assembly
9	682064	Flexible Drive Shaft
10	145570	Retaining Ring
11	145567	Washer
12	153312	Bushing Housing Assembly
13	180531	Guard Mounting Screw Assembly
14	147593	Guard and Blade Assembly
15	145569	Anti-Rotation Screw

Item	Part No.	Description
16	682061	Blade Assembly
17	153313	Spool Shaft
18	153619	Outer Spool and Eyelet Assembly
19	145566	Eyelet
20	610660	Retainer (10 pack)
21	610317	Spring
22	153600	Inner Reel
23	153066	Bump Head Knob Assembly
*	610375	Monofilament Cutting Line (50 ft.)
*	153577	Spool and Line (30 ft.) Assembly
*	147823	Complete Cutting Head Assembly (includes items 8, 10-23)
*		not shown